




ECOSCENT

Premium Scenting Solutions

PRODUCT MANUAL CERES

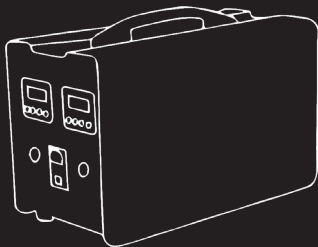

Please read the user manual carefully before using the product and keep it in a safe place.

Safety Precautions

1. Do not use overloaded power supplies, USB ports, sockets, or use damaged power cords and plugs. If used, it may endanger your safety and may cause fire.
2. Please do not open the inside of the scent delivery system as this may cause damage. If the scent delivery system works in error, please read the user manual carefully, follow the normal procedure or consult after-sales.
3. When the scent delivery system is working, do not disassemble the scent delivery system or shake the scent delivery system vigorously.
4. Do not put the scent delivery system or power adapter in water. Do not put water in the fragrance bottle.
5. When the scent delivery system is already filled with fragrance oil or cleaning solution, do not invert, tilt or rotate the scent delivery system to prevent liquid spillage and damage of the scent delivery system and surfaces.

In The Box

						
Power Supply	2 x 16mm Flexi-Hose (Upon Request)	2 x 6mm Flexi-Hose	2 x 5L Oil Bottle (Upon Request)	2 x 1L Oil Bottle	Spare Nozzle	Spare Oil Bottle Washer


Product Instruction

The EcoScent CERES features advanced diffusion technology that converts fragrance oil into a fine, dry, mist, releasing fragrance safely and directly into your environment without sprays or aerosols. With independent operation of atomising channel. Its features: the scent diffusion speed is fast, the atomised particle is fine and smooth, the oil consumption is stable and low, the scent diffusion space is large.

CERES uses a professional diaphragm pump which can work for 10,000 hours. The scent delivery system has five events. Each event can independently set the time and oil concentration. The scent delivery system is widely used by hotels, shopping malls, showrooms, retail stores, cinemas and other public spaces.

MODEL NO.	CERES	DIMENSIONS	300 x 165 x 190 mm
OIL CAPACITY	2 x 1000ML/ 2 x 5000ML	N.W	8kg
COVERAGE AREA	15000 CUBIC METERS	VOLTAGE	12 V DC
POWER	22W	NOISE	< 50dba
OIL CONSUMPTION	14ML PER HOUR/ PER OIL CHAMBER ON 100% SETTING	INSTALLATION METHOD	HVAC

Installation Instruction

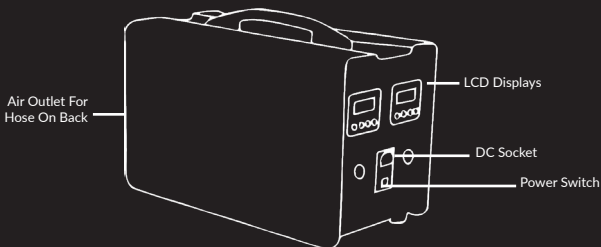

Ensure the scent machine has been disconnected from the power.

Unscrew the bottles. Take care when filling with fragrance oil. Once filled with the fragrance oil, re-align the bottle and screw back into the fitting until tight, then turn on the power.

For the first time using the scent machine, please tighten the oil bottles before connecting any power supply.

Settings



Operations

Connect the adapter to the correct power supply insert into 110 - 240 V power socket. Turn ON the machine, the LCD display will indicate the current time and the working status of the machine:

1. ON/OFF (ON means the machine is in working period, OFF means the machine is set not to work)
2. WORK/PAUSE (WORK means the machine is working, PAUSE means the machine is set to pause for the set period)
3. The LCD display indicates the current time, it is 24-hour.
4. The LCD display indicates the current actual working days, chosen from Monday to Sunday.

For the first time of using the machine, please tighten the oil bottle before connecting power supply. Set the working time and adjust the aroma concentration to the required setting. When adding or changing the fragrance oil please disconnect the power supply. Rotate the aroma bottles. Make sure connections are tight and connect the power supply again.

Working Time Setting

The CERES can be set for 4 different working periods, you can also set different working days from Monday to Sunday according to different requests. If working period goes past 00:00, please create a further working period such as 1. 23:00 - 23:59 and then 2. 00:01 - 6:00.

1. MODE Adjusts different functions, including the time, Working Periods, Work/Pause, Interval Time, Aroma Concentration. Press MODE for 10 seconds to restore the factory settings.

2. SET confirms the required settings input Time, Date, Aroma Concentration. Press SET for 10 seconds to lock/unlock the LCD control timer.

3. Press UP to adjust/ increase the setting, such as to adjust the Time, Aroma Concentration, Working Days.

4. Press DOWN to adjust/ decrease the settings, such as to adjust the Time, Aroma Concentration, Working Days.

Scent Work Time Setting

The system has two LCD screens and can be programmed to operate at different times with up to four events per LCD timer. Each LCD timer and fragrance bottle is independent from one another.

1. Press [SET] for the first time, the hour figure will flash, press [UP/DOWN] to adjust the hour.

2. Press [SET] for the second time, hour setting ends and minute figure will flash, press [UP/DOWN] to adjust the minute.

3. Press [SET] for the third time, the minute setting ends, the work day figure will flash, press [UP/DOWN] to adjust the day.

4. Press [SET] for the fourth time to complete the time and day setting.

Setting The Operating Periods

1. To set the operation periods, press [MODE] and the LCD screen will display [EVENT 1 ON]. Press [SET] to adjust the on time of first operation period.

2. Press [UP/DOWN] to adjust the hour, minutes and work day. (Repeat the operation from [SET] to [UP/DOWN] to set the hour, minutes then work days.)

3. Press [SET] to confirm each of your selections.

4. To set more operation periods (Events 2-4), repeat the above steps. The Ceres allows 4 operation periods.

Fragrance Concentration

1. After setting the operation period, continue to press [MODE], until the LCD screen displays [SCENT WORK]

2. Set the work time in each programmed period. From 5 seconds to 300 seconds, press UP/DOWN to adjust in 5 seconds pace....10.15.20...

3. Continue pressing [MODE], until the LCD screen displays [SCENT PAUSE], set the pause time in each period, From 10 seconds to 300 seconds, press UP/DOWN to adjust in 5 seconds pace, like 10,15,20...

4. Press [MODE] again to adjust the fragrance concentration from minimum to maximum. The lower the Work time and the higher the Pause time the weaker the fragrance output. As a starting point, select 60 seconds Work and 60 seconds Pause.

CONCENTRATION %	WORK	PAUSE
100%	300s	5s
75%	225s	75s
50%	150s	150s
40%	120s	180s
25%	75s	225s
5%	5s	300s

Scent Delivery System Maintenance

For the scent delivery system maintenance advice please refer to “Clean-Me Guide” included with your purchase. Please ensure the fragrance oil is topped up regularly. Clean with cleaning solution every 2 months or if changing the fragrance.

Do not use the water in the scent system. Do not tilt the scent system.


Before using the scent system please ensure it is correctly installed and to be checked at least monthly. Damage may be caused by improper installation or if using non approved EcoScent fragrances. Please take care when handling fragrance oils and the scent system as any spillages may cause damage to fabric, flooring, surfaces, polished and painted areas. Any spillages of fragrance oils from the fragrance bottle or from the scent system should be cleaned up immediately.

Troubleshooting

FAULT	SOLUTION
SCENT DELIVERY SYSTEM IS NOT WORKING	- Check the power supply. - Check if the power is on. - Check scent delivery system working time.
WEAK OR NO ATOMISATION	- Check if the nozzle is blocked - Check if the oil pump tube is attached correctly.
OIL LEAK	- Check if the scent system is upright. - Check if the gasket isn't broken. - Check the connection of the oil bottle and atomiser is closed tightly.
ABNORMAL NOISE	Please send video of the fault to ecoscent@ecoscent.co.uk


HVAC Installation

- Connect the flexi hose to the top of the unit.
- Connect the power supply and turn on the side switch to set the time and timer program as detailed overleaf, then turn off to complete install.
- Connect the flexi hose to the air supply outlet of HVAC system. The flexi-hose disperses the scent along with the cold/warm air flow output. A small hole should be drilled into the duct and secured with a stud fitting (HVAC kits are supplied at additional cost).
- When completing a self install scent delivery system via HVAC you should check the following points:
 1. The flexi-hose should always be pointing upwards - the flexi-hose should always be at an upward trajectory.
 2. It is recommended that flexi-hose is trimmed and kept to the minimum length possible with no tangles or loops.
 3. The machine should always be kept upright.
 4. The flexi-hose should remain secure at both ends.

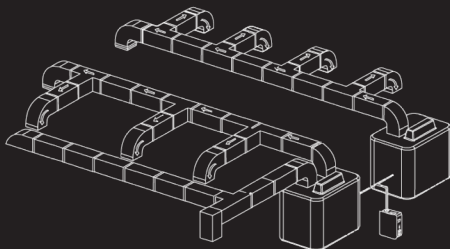


Scent System Atomiser Core Replacement Guide

A spare Atomiser Core and clear tube are supplied in the box when the Scent Machine is provided to you.

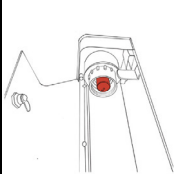


1. Locate the Atomiser Core

Turn off the scent machine. The Atomiser Core is positioned in the top section of the scent machine and is connected to the clear tube that draws fragrance from the bottle.

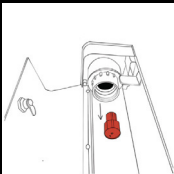

2. Remove the existing Atomiser Core

Gently pull the Atomiser Core downward to release it from the device. If it is firmly in place, use pliers carefully to assist removal. A small amount of fragrance or cleaning solution may be present, so please protect clothing, skin and surrounding surfaces from possible spills.

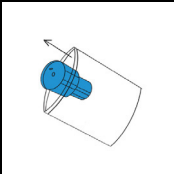


3. Install the new Atomiser Core

Insert the replacement Atomiser Core into the unit and reconnect the clear tube, ensuring it is fully and securely seated. Dispose of the old part.



4. Check the installation

Confirm the Atomiser Core is firmly in place and the tube is correctly attached before switching the scent machine back on.

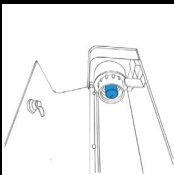

All Done!

Your scent system is now ready to use. Sit back and enjoy your chosen fragrance. If for any reason your scent system is not performing well please reach out to us at ecoscent@ecoscent.co.uk or WhatsApp +44 7361 534520

Care Tips:

Clean any spills immediately to prevent staining or slipping. Fragrance and cleaning solution can spill during replacement. Protect clothing, skin and nearby surfaces, and clean any spills immediately to avoid staining or slipping.

CLEAN ME GUIDE

It is important to regularly clean your scent delivery system with our EcoScent cleaning solution every couple of months to ensure the system runs smoothly and to prevent unnecessary internal damage.

STEP ONE



To clean the scent delivery system, ensure that fragrance oil bottle is empty then half fill with cleaning solution. Turn on the scent system to run as normal for 5-10 minutes.

STEP TWO



Turn off the power, pour out any residual cleaning solution and retain for future use.

STEP THREE



If the scent system is in constant use, the cleaning operation above should be carried out every 2-3 months to ensure ultimate efficiency of the atomised scent delivery technology.

If the equipment is not being used for a long period of time it is recommended that the fragrance oil bottle is emptied and the fragrance oil stored in a dry, dark, secure location. The scent system should then be cleaned with the cleaning solution as mentioned above. Please refer to User Manual for further information.

* Failure to clean the machinery will affect the warranty*