


ECOSCENT DEIMOS PRO

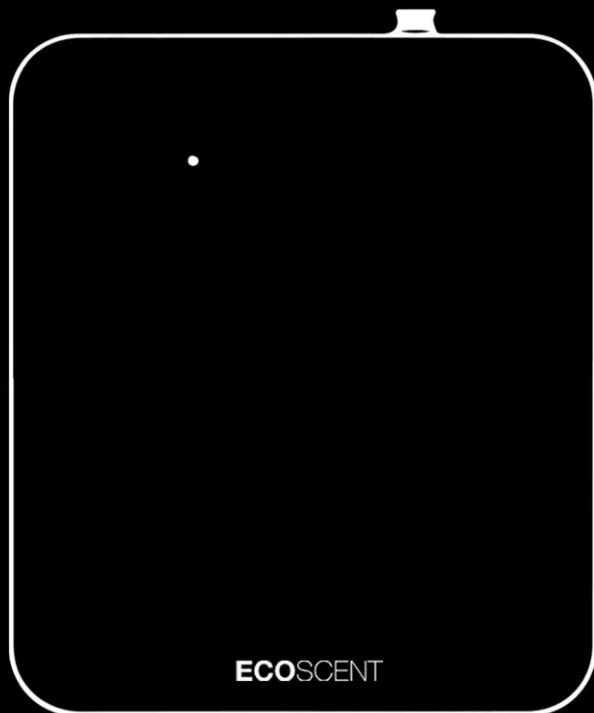

- HVAC connection
- Turbocharged fan with quick scent diffusion
- Built in LCD timer




COLOUR OPTIONS



White

SPECIFICATION SHEET

Product Code: 001-012

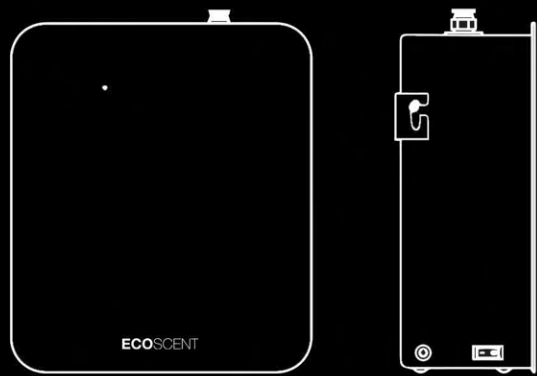


PRODUCT SPECIFICATIONS	
Product Name	EcoScent DEIMOS
Dimensions	W275mm X D105mm X H325mm
Weight	5.5kg
Coverage	2000m³ / Optional Fan
HVAC	HVAC Connection 14mm Flexi Hose
Scent Chamber	1000ml
Colour	White
Lifetime	10,000 Hours @ 45°
Operating Temp	0-50°C
IP Rating	IP54
Mounting	Wall-Mounted or Stand Alone
Minimum Noise	< 42 Dba
Connection	DC 12V
Control	24hr / 7 Day Digital Timer / Fragrance Intensity Control
Power Consumption	5W
Supply Voltage	12V DC
Supply Current	0.86A
Scent Consumption	4ml / Per hour on 100% Concentration. Lasts approx. 62 days (based on 1000ml used at 40% concentration, 10 hours a day)
Length of Product Tested	50pc
Input Voltage (V DC)	12V / 1m with Transformer Plug
Input Power (W DC)	15W
Total Scent Output (m³)	2000m³
Efficiency (SCENT /W)	400



ECOSCENT

Premium Scenting Solutions

PRODUCT MANUAL DEIMOS PRO

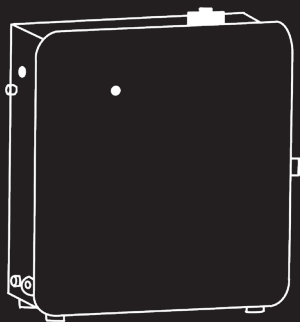

Please read the user manual carefully before using the product and keep it in a safe place.

Safety Precautions

1. Do not use overloaded power supplies, USB ports, sockets, or use damaged power cords and plugs. If used, it may endanger your safety and may cause fire.
2. Please do not open the inside of the scent delivery system as this may cause damage. If the scent delivery system works in error, please read the user manual carefully, follow the normal procedure or consult after-sales.
3. When the scent delivery system is working, do not disassemble the scent delivery system or shake the scent delivery system vigorously.
4. Do not put the scent delivery system or power adapter in water. Do not put water in the fragrance bottle.
5. When the scent delivery system is already filled with fragrance oil or cleaning solution, do not invert, tilt or rotate the scent delivery system to prevent liquid spillage and damage of the scent delivery system and surfaces.

In The Box

						
Power Supply	Hanging Plate	Spare Oil Bottle Washer	User Manual	Fixings	HVAC Connector	14mm Flexi-Hose


Product Instruction

The EcoScent DEIMOS PRO features advanced diffusion technology that converts fragrance oil into a fine, dry, mist, releasing fragrance safely and directly into your environment without sprays or aerosols. With independent operation of turbocharged fan and atomising channel. Its features: the scent diffusion speed is fast, the atomised particle is fine and smooth, the oil consumption is stable and low, the scent diffusion space is large.


DEIMOS PRO uses a professional diaphragm pump which can work for 10,000 hours. The scent delivery system has five events. Each event can independently set the time and oil concentration. The scent delivery system is widely used by hotels, shopping malls, showrooms, retail stores, cinemas and other public spaces.

MODEL NO.	DEIMOS PRO	DIMENSIONS	270 x 105 x 325 mm
OIL CAPACITY	1000ML	N.W	5.4kg
COVERAGE AREA	2000 CUBIC METERS	VOLTAGE	DC12V, 1A
POWER	15W	NOISE	40dba
OIL CONSUMPTION	4ML PER HOUR ON 100% SETTING	INSTALLATION METHOD	HVAC Desktop Wall Mounted

Installation Instruction

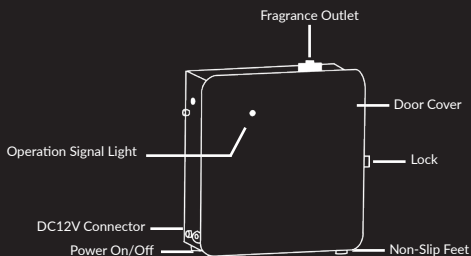

Hanging Plate

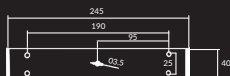


Fix the hanging plate according to the dimensions in the drawing.

Connect power supply, press the on, off button, green light means the scent delivery system power on.


Insert the key, twist it clockwise, to unlock the cover.



Pull door towards you to open.

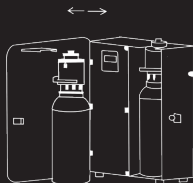


Remove the oil bottle, turn the atomiser counter clockwise to take off it from the bottle, put liquid into the bottle, tighten the atomiser on the bottle clockwise and put the bottle into the scent delivery system, set the scent delivery system working time.

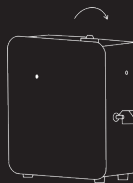

Close the cover, the working signal light is on during the working period, representing that it works as normal.

Settings

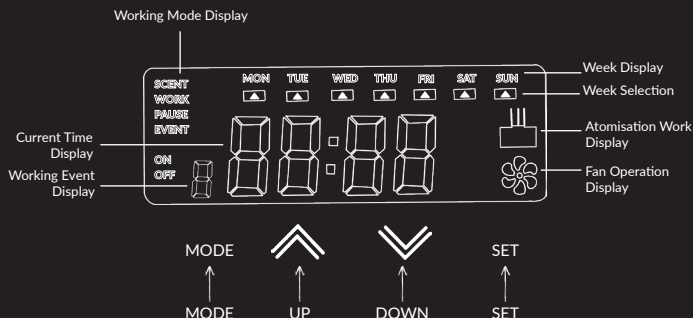

Power ON

Connect the power supply, if the screen lights up automatically it means that the scent delivery system is turned on and can work as normal, the time, day and the working mode.

Setting The Time

Press SET for 5 seconds to activate the time setting interface press   to set the hour,

Press SET to confirm and start minute setting, press   to set minutes, press SET to confirm and start the week setting, press   to select the working day, press SET to confirm and the time setting is end. The system automatically saves the settings.

Fan On/Off

Press  for 5 seconds, the fan is off, the screen display icon  disappears, press  again for five seconds, the fan is on, and the  icon will appear, keep pressing  to select fan level

Working Time Setting

Press MODE once to enter the work start time setting, press SET to activate the hour setting, press  to set hour, press SET to confirm and start minute setting, press  to set minute, press SET to confirm and start week day setting, press  to select the day of week to work, press  to deselect any day of the week, where the scent system should not operate, press SET to confirm and the working start time setting is finished.

Press MODE again to enter the working end time setting, press SET to activate the hour setting, press  to set hour, press SET to confirm and start minute setting, press  to set minute, press SET to confirm and the working end time setting is finished.

Press MODE a further time to enter the scent work setting, press  to set the scent work time; the scent work time is from 5-300 seconds, then scent concentration setting is finished.

Press MODE a final time to enter scent pause time setting; scent pause time is 5-300 seconds, press  to set the pause time, then the work pause time setting is finished. The work pause time setting of the other 4 events, repeat as above.

An Event ends at 12am. If you require the machine to work past midnight, please create a further working period such as 1: 23:00 - 23:59 and then 2: 00:01 - 6:00

Scent Work Time Quick Setting

At current work event, press  that will set the scent work time, press  to increase the scent work time, press  to reduce the scent work time. The scent pause time can be set in this way as well, after setting the scent work time, press MODE to enter scent pause setting, then the scent delivery system save the setting automatically (This function is set for current work event only. To set other events, refer to setting up working setting time)

Restore Factory Setting

Press MODE for 10 seconds, the scent delivery system is restored to factory setting, the first work event of factory setting is 8:00-22:00, scent concentration is 60:60, the work time of other 4 events are all 00:00-00:00.

Fragrance Concentration

The concentration of the fragrance can be controlled by pressing MODE three times and then adjusting the percentage using the  and  buttons. The scent system works from 10 to 190 seconds a time and can be paused from 10 to 190 seconds per your requirements. The longer the pause, the weaker the fragrance.

CONCENTRATION %	WORK	PAUSE
100%	300s	5s
75%	225s	75s
50%	150s	150s
40%	120s	180s
25%	75s	225s
5%	5s	300s

Scent Delivery System Maintenance


For the scent delivery system maintenance advice please refer to "Clean-Me Guide" included with your purchase. Please ensure the fragrance oil is topped up regularly. Clean with cleaning solution every 2 months or if changing the fragrance.

Do not use the water in the scent system. Do not tilt the scent system.

Before using the scent system please ensure it is correctly installed and to be checked at least monthly. Damage may be caused by improper installation or if using non approved EcoScent fragrances. Please take care when handling fragrance oils and the scent system as any spillages may cause damage to fabric, flooring, surfaces, polished and painted areas. Any spillages of fragrance oils from the fragrance bottle or from the scent system should be cleaned up immediately.


HVAC Installation

- Connect the flexi hose to the top of the unit.
- Connect the power supply and turn on the side switch to set the time and timer program as detailed overleaf, then turn off to complete install.
- Connect the flexi hose to the air supply outlet of HVAC system. The flexi-hose disperses the scent along with the cold/warm air flow output. A small hole should be drilled into the duct and secured with a stud fitting (HVAC kits are supplied at additional cost).
- When completing a self install scent delivery system via HVAC you should check the following points:
 1. The flexi-hose should always be pointing upwards - the flexi-hose should always be at an upward trajectory.
 2. It is recommended that flexi-hose is trimmed and kept to the minimum length possible with no tangles or loops.
 3. The machine should always be kept upright.
 4. The flexi-hose should remain secure at both ends.

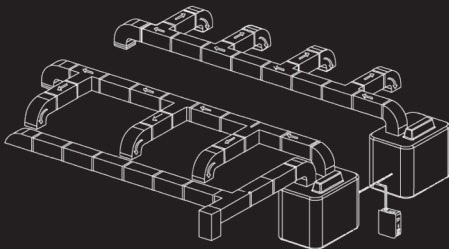

Scent System Atomiser Core Replacement Guide

A spare Atomiser Core and clear tube are supplied in the box when the Scent Machine is provided to you.

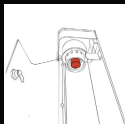


1. Locate the Atomiser Core

Turn off the scent machine. The Atomiser Core is positioned in the top section of the scent machine and is connected to the clear tube that draws fragrance from the bottle.



2. Remove the existing Atomiser Core

Gently pull the Atomiser Core downward to release it from the device. If it is firmly in place, use pliers carefully to assist removal. A small amount of fragrance or cleaning solution may be present, so please protect clothing, skin and surrounding surfaces from possible spills.

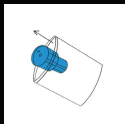


3. Install the new Atomiser Core

Insert the replacement Atomiser Core into the unit and reconnect the clear tube, ensuring it is fully and securely seated. Dispose of the old part.



4. Check the installation

Confirm the Atomiser Core is firmly in place and the tube is correctly attached before switching the scent machine back on.

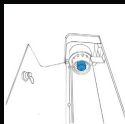

All Done!

Your scent system is now ready to use. Sit back and enjoy your chosen fragrance. If for any reason your scent system is not performing well please reach out to us at ecoscent@ecoscent.co.uk or WhatsApp +44 7361 534520

Care Tips:

Clean any spills immediately to prevent staining or slipping. Fragrance and cleaning solution can spill during replacement. Protect clothing, skin and nearby surfaces, and clean any spills immediately to avoid staining or slipping.

CLEAN ME GUIDE

It is important to regularly clean your scent delivery system with our EcoScent cleaning solution every couple of months to ensure the system runs smoothly and to prevent unnecessary internal damage.

STEP ONE



To clean the scent delivery system, ensure that fragrance oil bottle is empty then half fill with cleaning solution. Turn on the scent system to run as normal for 5-10 minutes.

STEP TWO



Turn off the power, pour out any residual cleaning solution and retain for future use.

STEP THREE



If the scent system is in constant use, the cleaning operation above should be carried out every 2-3 months to ensure ultimate efficiency of the atomised scent delivery technology.

If the equipment is not being used for a long period of time it is recommended that the fragrance oil bottle is emptied and the fragrance oil stored in a dry, dark, secure location. The scent system should then be cleaned with the cleaning solution as mentioned above. Please refer to User Manual for further information.

* Failure to clean the machinery will affect the warranty*