


ECOSCENT PUCK

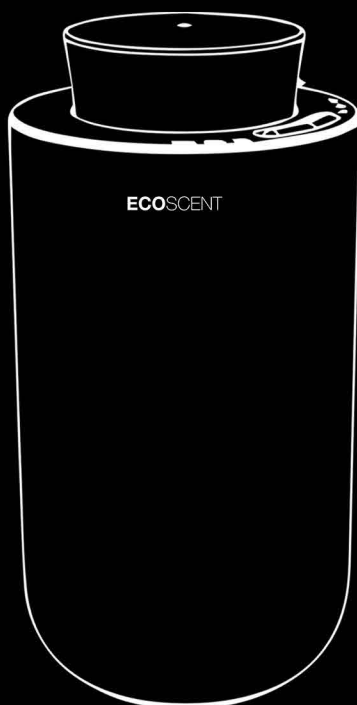

- Car or desktop scenting.
- An auto turn off and scent intensity program.
- Chargeable or USB power supply plug.




COLOUR OPTIONS



Black

SPECIFICATION SHEET

Product Code: 001-015

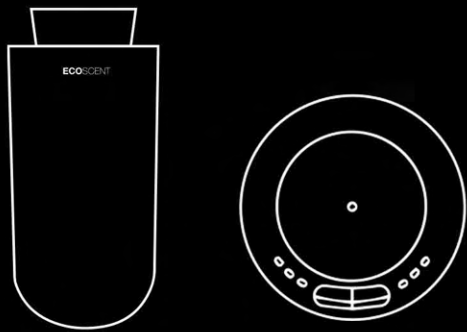


PRODUCT SPECIFICATIONS	
Product Name	EcoScent PUCK
Dimensions	Ø 70mm X 137mm
Weight	0.32kg
Coverage	100m ³
HVAC	No
Scent Chamber	10ml
Colour	Black & Silver
Lifetime	10,000 Hours @ 45°
Operating Temp	0-50°C
IP Rating	IP54
Mounting	Car or Desktop
Minimum Noise	<50 Dba
Connection	DC5V - 1A
Control	Manual Turn On and Auto Turn Off / Scent Intensity Control / 3 Mode Timer
Power Consumption	2W
Supply Voltage	5V DC
Supply Current	0.3A
Scent Consumption	0.4ml / Per hour on 100% Concentration. Lasts approx. 35 days (based on 500ml used at 40% concentration, 10 hours a day)
Length of Product Tested	50pc
Input Voltage (V DC)	100 - 240V / 50 / 60 Hz
Input Power (W DC)	2W
Total Scent Output (m ³)	100m ³
Efficiency (SCENT /W)	50



ECOSCENT

Premium Scenting Solutions

PRODUCT MANUAL PUCK

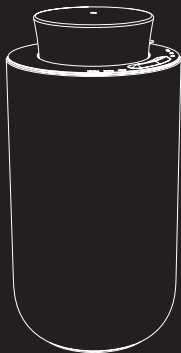

Please read the user manual carefully before using the product and keep it in a safe place.

Safety Precautions

1. Do not use overloaded power supplies, USB ports, sockets, or use damaged power cords and plugs. If used, it may endanger your safety and may cause fire.
2. Please do not open the inside of the scent delivery system as this may cause damage. If the scent delivery system works in error, please read the user manual carefully, follow the normal procedure or consult after-sales.
3. When the scent delivery system is working, do not disassemble the scent delivery system or shake the scent delivery system vigorously.
4. Do not put the scent delivery system or power adapter in water. Do not put water in the fragrance bottle.
5. When the scent delivery system is already filled with fragrance oil or cleaning solution, do not invert, tilt or rotate the scent delivery system to prevent liquid spillage and damage of the scent delivery system and surfaces.

In The Box

			
Plug	Type - C Cable	Sealing Ring	Oil Dropper



Product Instruction

The EcoScent PUCK features advanced diffusion technology that converts fragrance oil into a fine, dry, mist, releasing fragrance safely and directly into your environment without sprays or aerosols. Its features: the scent diffusion speed is fast, the atomised particle is fine and smooth, the oil consumption is stable and low.

The EcoScent PUCK uses a professional diaphragm pump which can work for 10,000 hours. Features an auto turn off and scent intensity program. This unit can be manually set to come on for 1, 2 or 4 hours per day before it auto turns off. It is chargeable so no need for a constant source of power. It can use 56H if setting Lowest mode, 15H if setting Strongest mode and 24H if setting Moderate mode. Control the working time and aroma concentration based on your preference. Leading technology with patented micron atomisation makes the PUCK'S aroma diffuse and spread quickly providing a long lasting fragrance.

MODEL NO.	PUCK	DIMENSIONS	ø70 x 137 mm
OIL CAPACITY	10ML	N.W	312g
COVERAGE AREA	100 CUBIC METERS	VOLTAGE	DC5V-1A
POWER	2W	NOISE	50dba
OIL CONSUMPTION	0.4ML PER HOUR ON 100%	INSTALLATION METHOD	Desktop Standing Car Standing

Installation Instruction

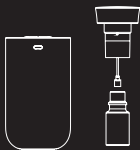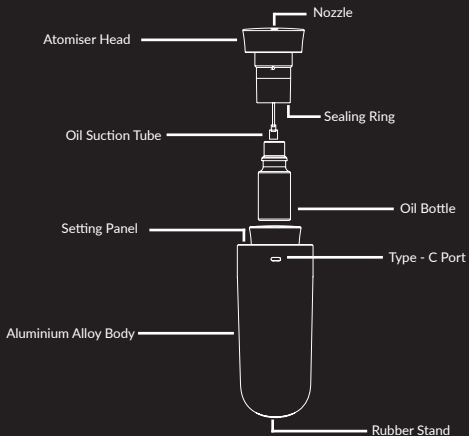


Rotate to take out the atomiser head.

Rotate to take out the bottle and fill it with a fragrance oil.

Install the atomiser head and begin setting up.

Settings

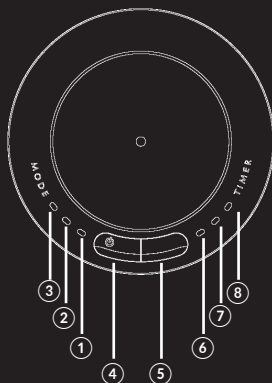

- ① Lowest mode indicator light: Atomise 15s, Pause 165s
- ② Moderate mode indicator light: Atomise 60s, Pause 120s.
- ③ Strongest mode indicator light: Atomise 120s, Pause 60s.
- ④ ON/OFF button and adjust atomisation modes.
- ⑤ Timing button: Set working time 1/2/4 hours.
- ⑥ Indicator light: Work for 1 hour.
- ⑦ Indicator light: Work for 2 hours.
- ⑧ Indicator light: Work for 4 hours.

Power ON

Plug in the device and make sure that it is fully charged. Press the ON/OFF button for 1.5 seconds to switch the machine ON and OFF.

Troubleshooting

FAULT	SOLUTION
SCENT DELIVERY SYSTEM IS NOT WORKING	- Check the power supply. - Check if the power is on. - Check scent delivery system program settings.
WEAK OR NO ATOMISATION	- Check if the nozzle is blocked - Check if the oil pump tube is attached correctly.
OIL LEAK	- Check if the scent system is upright. - Check is the bottle washer isn't broken. - Check the connection of the oil bottle and atomiser is closed tightly.
ABNORMAL NOISE	Please send video of the fault to ecoscent@ecoscent.co.uk

Scent Delivery System Maintenance

For the scent delivery system maintenance advice please refer to "Clean-Me Guide" included with your purchase. Please ensure the fragrance oil is topped up regularly. Clean with cleaning solution every 2 months or if changing the fragrance.

Do not use the water in the scent system. Do not tilt the scent system.

CLEAN ME GUIDE

It is important to regularly clean your scent delivery system with our EcoScent cleaning solution every couple of months to ensure the system runs smoothly and to prevent unnecessary internal damage.

STEP ONE



To clean the scent delivery system, ensure that fragrance oil bottle is empty then half fill with cleaning solution. Turn on the scent system to run as normal for 5-10 minutes.

STEP TWO



Turn off the power, pour out any residual cleaning solution and retain for future use.

STEP THREE



If the scent system is in constant use, the cleaning operation above should be carried out every 2-3 months to ensure ultimate efficiency of the atomised scent delivery technology.

If the equipment is not being used for a long period of time it is recommended that the fragrance oil bottle is emptied and the fragrance oil stored in a dry, dark, secure location. The scent system should then be cleaned with the cleaning solution as mentioned above. Please refer to User Manual for further information.

* Failure to clean the machinery will affect the warranty*