


ECOSCENT MINI PRO+



- Built in LCD timer
- Mains powered

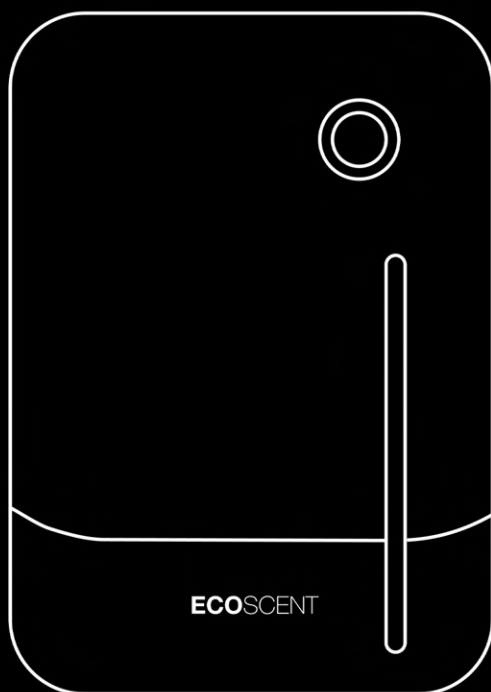


COLOUR OPTIONS



White

SPECIFICATION SHEET

Product Code: 001-104

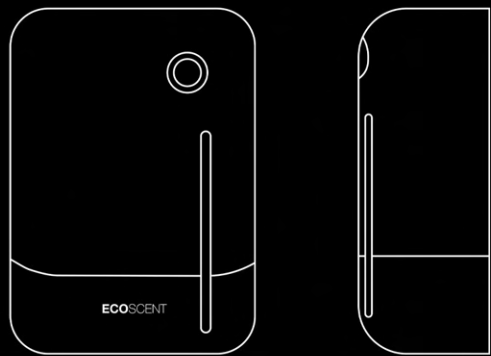


PRODUCT SPECIFICATIONS	
Product Name	EcoScent MINI PRO+
Dimensions	W147mm X D84mm X H202mm
Weight	0.71kg
Coverage	300m ³
HVAC	No
Scent Chamber	200ml
Colour	White
Lifetime	10,000 Hours @ 45°
Operating Temp	0-50°C
IP Rating	IP54
Mounting	Wall-Mounted or Floor Standing
Minimum Noise	<45 DbA
Connection	DC 12V
Control	24hr / 7 Day Digital Timer / Fragrance Intensity / Optional WIFI control via our App.
Power Consumption	6W
Supply Voltage	12V DC
Scent Consumption	0.80ml / per hour on 100% Concentration. Lasts approx. 80 days (based on 200ml used at 30% concentration, 10 hours a day).
Length of Product Tested	50pc
Input Voltage (V DC)	12V
Input Power (W DC)	6W
Total Scent Output (m ³)	300m ³
Efficiency (SCENT /W)	37.5



ECOSCENT

Premium Scenting Solutions

PRODUCT MANUAL MINI PRO+

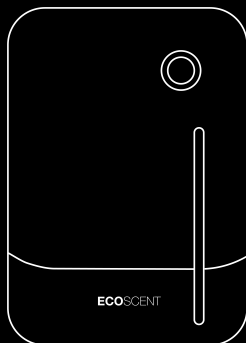

Please read the user manual carefully before using the product and keep it in a safe place.

Safety Precautions

1. Do not use overloaded power supplies, USB ports, sockets, or use damaged power cords/plugs. If used, it may endanger your safety and may cause fire.
2. Please do not open the inside of the scent delivery system as this may cause damage. If the scent delivery system has an error, or isn't working properly, please read the manual carefully, follow normal procedure and then consult EcoScent if it is still not working.
3. When the scent delivery system is working, do not disassemble the scent delivery system or shake the scent delivery system vigorously.
4. Do not put the scent delivery system or plug in water. Do not put water in the fragrance bottle.
5. When the scent delivery system is already filled with fragrance oil or cleaning solution do not invert, tilt or rotate the scent delivery system to prevent liquid spillage and damage of the scent delivery system and surfaces.

In The Box

Item	Power adapter	Hanging panel	Seal ring	User manual	Screw	Expansion screw
Diagram						
Item	Atomizer core					
Diagram						

Product Introduction

The EcoScent MINI PRO + features advanced diffusion technology that converts fragrance oil into a fine, dry, mist, releasing fragrance safely and directly into your environment without sprays or aerosols.

The machine can be controlled manually via the control panel on the machine or via Wifi Control. Ensure your scent system is switched on. Press and hold the 'MODE' button for 3 seconds until screen displays a flashing 'AP' message. Then on your mobile/tablet open the Aroma World App and click the '+' sign in the upper right corner. Select 'Add WIFI Device'. Enter your WIFI Name and Password and press 'SMART CONFIG'. Allow permissions for Aroma World to connect to devices on your network. Once it finishes configuring, enter the device name and select the device type (model). Once both are selected, press 'CONFIRM'. The device is now added as an ungrouped device by default.

If the scent machine has a QR Code on it, simply open your Aroma World app and press the  symbol on the top left corner to open the camera and scan it. This should add your device to the app.

MODEL NO.	MINI PRO +	DIMENSIONS	147 x 84 x 202 mm
OIL CAPACITY	200ML	N.W	0.71kg
COVERAGE AREA	300 CUBIC METERS	VOLTAGE	DC 12V
POWER	6W	NOISE	<45 Dba
OIL CONSUMPTION	2ML PER HOUR ON 100% SETTING	INSTALLATION METHOD	Wall Mounted


Connecting Your Scent System to the Aroma World App



Search for Aroma World App on the App Store / Google Play.

Sign up using your phone number or email address.
Then proceed to log into your account.




Interface

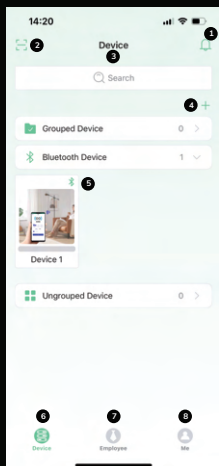

- ① All operation messages.
- ② Scan QR code on the machine to view the machine directly.
- ③ Enter device serial number to find the machine.
- ④ Add another device.
- ⑤ Entering machines settings.
- ⑥ Device management interface.
- ⑦ Staff management interface.
- ⑧ Personal account interface.



Setting Up WIFI Function

1. Ensure your scent system is switched on.
2. Press and hold the 'MODE' button for 3 seconds until screen displays a flashing 'AP' message.
3. Then on your mobile device open the Aroma World App and open the '+' sign in the upper right corner.
4. Select 'Add WIFI Device'.
5. Enter your WIFI Name and Password connected to the current mobile phone/tablet, and press 'SMART CONFIG'.
6. Allow permissions for Aroma World to connect to devices on your local network.
7. Once it finishes configuring, enter the device name and select the device type (model). Once both are selected, press 'CONFIRM' to complete.
8. The device is now added as an ungrouped device.

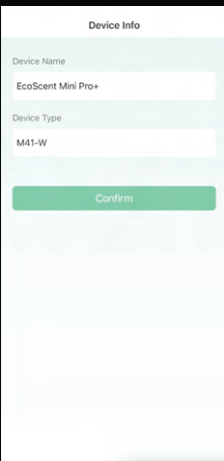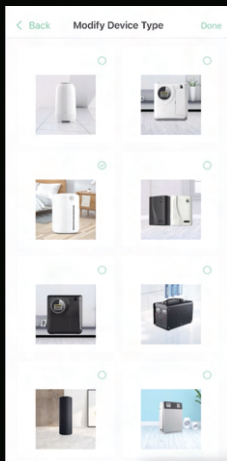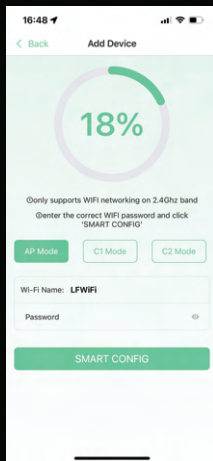


Setting Up Work Time Via WIFI

1. Select the unit you wish to configure and press the '+' button on the right-hand side of the 'Work Mode' Tab at the bottom of the page.
2. At the top of the screen, select the days you would like your machine to operate.
3. In the middle section, you can choose when you want your scent system to turn on / off.
4. To set the fragrance intensity, reference the Fragrance Concentration Grid further into the guide & select your chosen Working / Pause time.
5. Finally, press 'CONFIRM'.

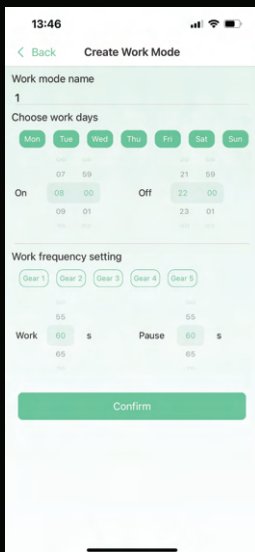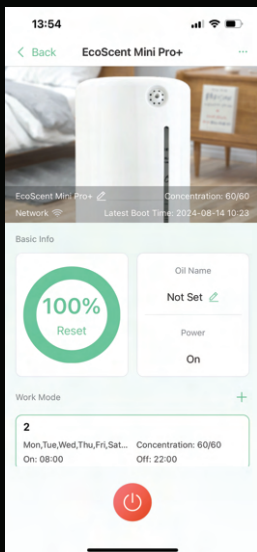


Installation Instructions

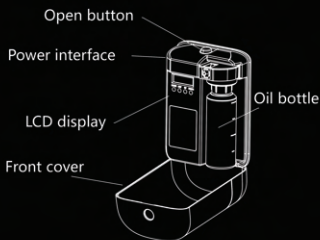

Gently press the top raised button to open the cover.

Pull the cover to open.
Pull bottle towards you to remove.

Rotate the interior bottle counter clockwise to detach, add your fragrance oil, reinsert the oil bottle back into your system, and then proceed to program your diffusion. Do not add water.

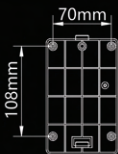


Fix the hanging plate according to the dimensions above.

Attach the system to the wall using the locking screw to ensure stability. Next, position the device onto the hanging plate, secure with locking screw.

Connect to the power supply. Your Mini Pro+ is now ready to use.

Please ensure the unit is mounted with at least a 30cm distance between the unit and any surface above it such as a ceiling or table.

Settings

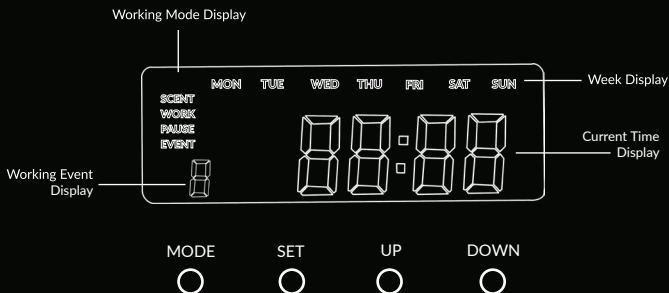

Power ON

Connect the power supply. If the screen lights up automatically, it means that the scent system is turned on and can work as normal.

Current Time Setting

Press SET and using the UP and DOWN buttons, select the current hour. Press SET to confirm.

Then using the UP and DOWN buttons, select the current minute and press SET to confirm.

Working Time Setting (EVENTS)

1. Press MODE once to enter the work start time setting. It should say EVENT ON on the left.
2. Press SET to edit the day selected. The chosen day should start flashing.
3. Press UP to make changes on the selected day.
4. To remove that day from the event press down after completing Steps 1- 3.
5. If instead of making changes to the day you are on you want to skip to the next day; Press the DOWN (without pressing the UP button like before) until you reach your desired day.
6. Press SET to confirm your selections.

You should now be through to the hour setting. Using the UP and DOWN buttons, select the hour you want the machine to start and press SET to confirm. Using the UP and DOWN buttons, select the chosen minute. Press SET to confirm.

Now set the time you want the machine to turn off. Change the hour using the UP and DOWN buttons. Press SET to confirm. Use the UP and DOWN buttons to select the chosen minute and press SET to confirm.

This will take you to the Fragrance Concentration Selection. SCENT WORK should appear on the left of the screen. Read the next page to see how to set the Fragrance Concentration.

Fragrance Concentration Setting

You can get to this stage by

1: Following all the steps on the previous page to reach the SCENT WORK on the left of the screen.

Or 2: You can skip those steps to get to Fragrance Concentration Setting by pressing MODE until EVENT ON shows on the left, and then pressing SET multiple times until SCENT WORK appears.

Once there via either route, Press UP or DOWN to set the desired working time. Then press SET to confirm. PAUSE should now appear on the left of the screen. Press UP or DOWN to set the desired PAUSE time. Press MODE to confirm until the current time shows on screen.

To set the fragrance intensity, reference the concentration grid in the next page and select your chosen WORKING / PAUSE time.

An EVENT ends at 12 am. If you require the machine to work past midnight, please create a further working period such as EVENT 1: 23:00-23:59 and then EVENT 2: 00:01-6:00.

Restore Factory Setting

Press SET for 5 seconds. The scent delivery system is restored to factory setting. The first work event of the factory settings is 8:00- 22:00 with the scent concentration of 60:60. The work time of the other 4 events are all 0:00-00:00.

Fragrance Concentration

The Scent System works from 5 to 300 seconds at a time and can be paused from 5 to 300 seconds per your requirements. The longer the pause, the weaker the fragrance.

CONCENTRATION %	WORK	PAUSE
100%	300s	5s
75%	225s	75s
50%	150s	120s
40%	120s	150s
25%	75s	225s
5%	5s	300s

Scent Delivery System Maintenance

For the scent delivery system maintenance advice please refer to the Clean Me Guide on the last page of this document. Please ensure the fragrance oil is topped up regularly. Clean with cleaning solution every 2 months or if changing the fragrance.

Do not use water in the scent delivery system. Do not tilt the scent delivery system, keep upright.

Troubleshooting


Before using the scent delivery system, please ensure it is correctly installed and to be checked at least monthly. Damage may be caused by improper installation or if using non approved EcoScent fragrances.

Please take care when handling fragrance oils and the scent delivery system as any spillages may cause damage to fabric, flooring, surfaces, polished and painted areas. Any spillages of fragrance oils from the fragrance bottle or from the scent system should be cleaned up immediately.

FAULT	SOLUTION
SCENT DELIVERY SYSTEM IS NOT WORKING	• Check the power supply. • Check the power is on. • Check the scent delivery system working time.
WEAK OR NO ATOMISATION	• Check if the nozzle is blocked. • Check if the oil pump tube is attached correctly.
OIL LEAK	• Check if the scent delivery system is upright. • Check the connection of the oil bottle and the atomiser is closed tightly.
ABNORMAL NOISE	Please send a video of the fault to ecoscent@ecoscent.co.uk


Scent System Atomiser Core Replacement Guide

A spare Atomiser Core and clear tube are supplied in the box when the Scent Machine is provided to you.

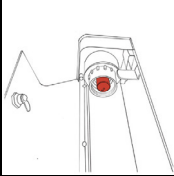


1. Locate the Atomiser Core

Turn off the scent machine. The Atomiser Core is positioned in the top section of the scent machine and is connected to the clear tube that draws fragrance from the bottle.

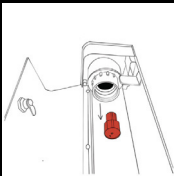

2. Remove the existing Atomiser Core

Gently pull the Atomiser Core downward to release it from the device. If it is firmly in place, use pliers carefully to assist removal. A small amount of fragrance or cleaning solution may be present, so please protect clothing, skin and surrounding surfaces from possible spills.

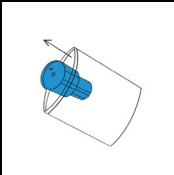


3. Install the new Atomiser Core

Insert the replacement Atomiser Core into the unit and reconnect the clear tube, ensuring it is fully and securely seated. Dispose of the old part.



4. Check the installation

Confirm the Atomiser Core is firmly in place and the tube is correctly attached before switching the scent machine back on.

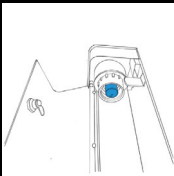

All Done!

Your scent system is now ready to use. Sit back and enjoy your chosen fragrance. If for any reason your scent system is not performing well please reach out to us at ecoscent@ecoscent.co.uk or WhatsApp +44 7361 534520

Care Tips:

Clean any spills immediately to prevent staining or slipping. Fragrance and cleaning solution can spill during replacement. Protect clothing, skin and nearby surfaces, and clean any spills immediately to avoid staining or slipping.

CLEAN ME GUIDE

It is important to clean your scent delivery system every couple of months to ensure the system runs smoothly and to prevent unnecessary internal damage. Also, use the cleaning solution before replenishing the fragrance.

STEP ONE



To clean the scent delivery system, ensure that fragrance oil bottle is empty then half fill with cleaning solution. Turn on the scent system to run as normal for 10 minutes.

STEP TWO



Turn off the power, pour out any residual cleaning solution and retain for future use.

STEP THREE



If the scent system is in constant use, the cleaning operation above should be carried out every 2-3 months to ensure ultimate efficiency of the atomised scent delivery technology.
Clean the outside of the scent machine with a damp cloth.

If your EcoScent Machine will not be in use for an extended period, follow these additional steps:

- Empty the fragrance oil bottle.
- Store the fragrance oil in a dry, dark, and secure location.
- Clean the scent system using the cleaning solution as instructed above.
- Wipe your machine.

* Failure to clean the scent system will affect the warranty *