


ECOSCENT Scented Screen



USER MANUAL

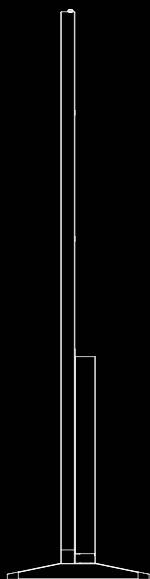

ECOSCENT

Index

- 1** Product Manual
- 2** Caution
- 3** Product Component Parts
- 4** Essential Oil Bottle Installation
- 5** Mobile App Setup Guide
- 6** Network control
- 7** Grouping and group control
- 8** Other operations
- 9** Fault Inspection
- 10** Warranty and after-sales service
- 11** Machine Maintenance
- 12** Long-term non-use
- 13** Scent System Atomiser Core Replacement
- 14** Clean Me guide

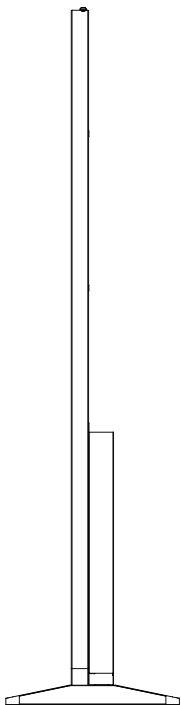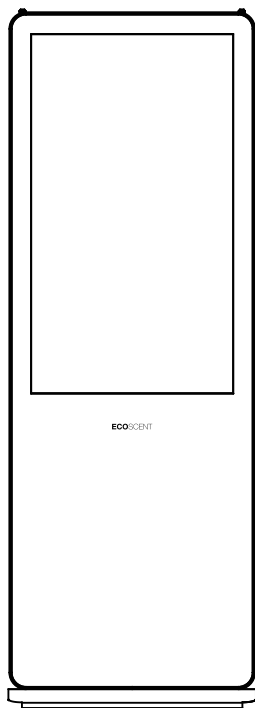

ECOSCENT

1 Product Manual

Product Features

Model: EcoScent Scented Screen

Size: L640*W440*H1800mm

Oil Chamber: 2 x 500ml Bottles

Voltage: 110-240V

Power : 80W

Noise Level : ≤ 40 dba


Weight : 57KG

Coverage : 800-1200m³

Cubic metres are the most accurate as it accounts for ceiling height. Square feet and square metres are only approximations.

2 Caution

The following basic safety precautions should be always complied with. Avoid casualties and property loss, please always follow the attentions in the below.

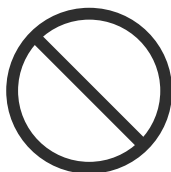

Prohibition

Installing

- (1) Do not tilt the device.
- (2) Do not pour the oil on the leather, because it is not anti-corrosive.
- (3) Do not install the device at the place where children can touch.
- (4) Do not use unsafe plug or power.
- (6) Keep the device away from fire and heat source, prohibit to store flammable and explosive materials around the device.
- (7) Do not use device in high temperature or wet environment.
- (8) Do not use inflammable, explosive, corrosive and other hazardous solvents work with the device.




Necessary


Installing

- (1) Ensure the firmness of installation area.
- (2) Install the device in a ventilative and adequate space.
- (3) Do not block the sprayer by hand or other obstructions when the device is working.
- (4) Do not spill water or conductive, corrosive liquid on the device surface or fall inside of the device.
- (5) Do not use the device excessively. It is recommended that the average daily usage time should not exceed 14 hours, and level B is recommended.
- (7) Cut off the power in extreme weather environment.

3 Product Component Parts

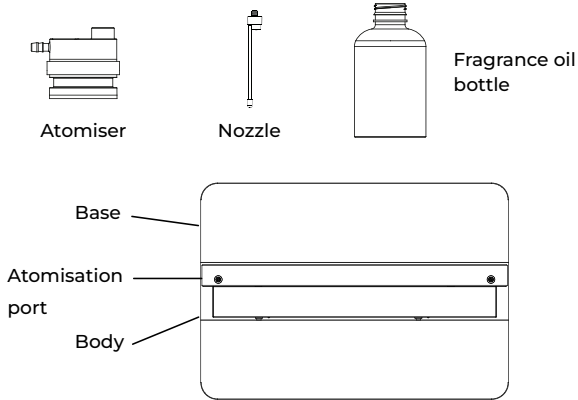

4 Essential Oil Bottle Installation

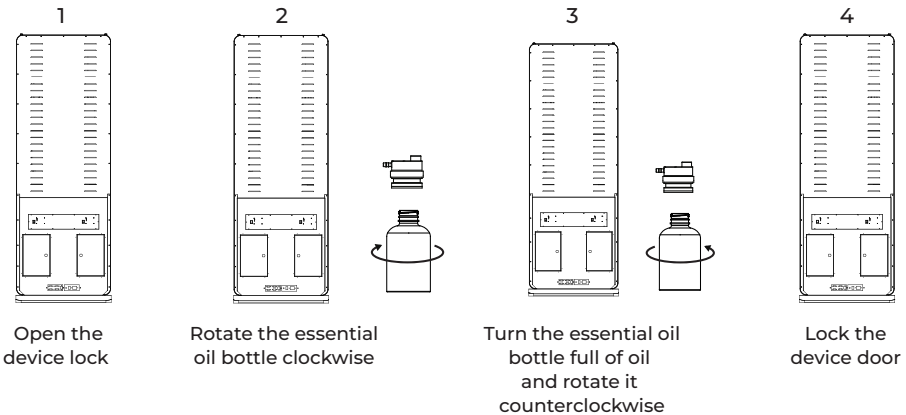

5 Set Up Bluetooth Function



IOS APP



ANDROID APP



*You can also scan the QR code to download the Aroma-Link app and begin configuring the diffuser on your phone.

Figure 1

(2) Register an Account

Open the Aroma-Link app to access the login screen (as shown in Figure 1).

If this is your first time using the app, tap **[Register]** to create a new account (as shown in Figure 1).

Enter your account information, email address, password, and other required details, then tap **[Register]**.

The app will send an activation email to your registered email address. Please open the email and activate your account (as shown in Figure 2).

Figure 2

5 Mobile App Setup Guide

After the app sends the registration email, tap **[Confirm]**, then open the received registration email and click **[Activate]** (as shown in Figure 3).

(3) Bluetooth Control

(1) Tap Bluetooth (As shown in the Figure 4).

The app will automatically search for nearby devices. Tap the device name to connect. The default initial password is "1234" (as shown in Figure 5).

Figure 3

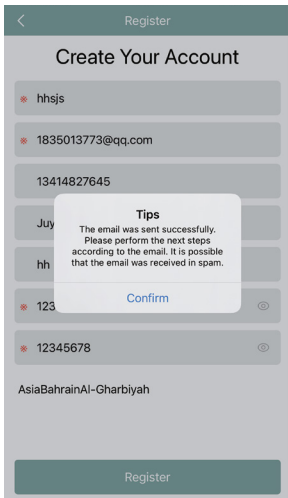


Figure 4


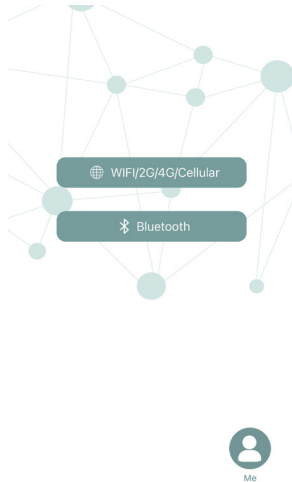


Figure 5

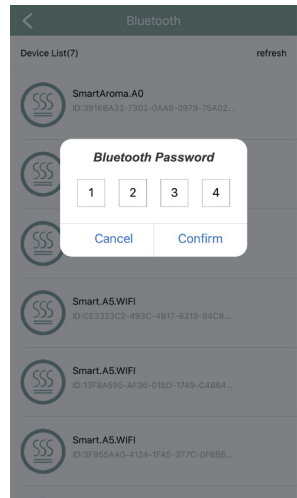

4. The control interface is shown on page 6.

(1) On/Off: Tap **[ON/OFF]** to turn the machine on or off (as shown in Figure 6).

(2) Fan: Tap **[Fan]** to turn the fan on or off (as shown in Figure 6).

(3) Set Working Time and Frequency: Tap **[Set]** to configure the working time period and operating frequency (as shown in Figures 7 & 8).

Figure 6

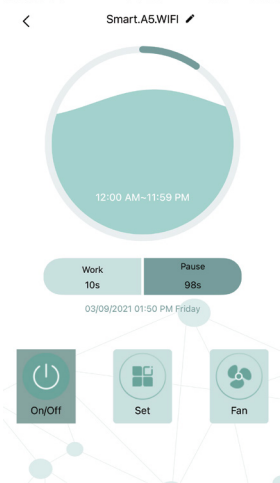


Figure 7


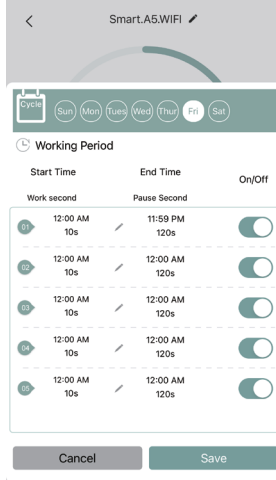


Figure 8

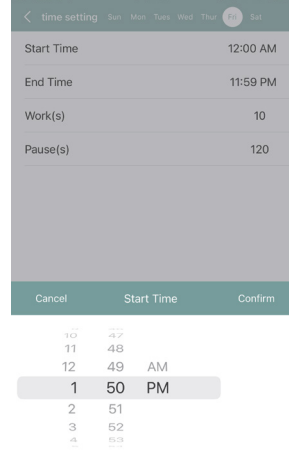

6 Network control

(Note: This function applies only to models that support Wi-Fi / 4G / 5G / Cellular connectivity).

The control interface is shown below:

- (1) Tap Wi-Fi / 4G / 5G / Cellular (as shown in Figure 9).
- (2) Tap **[Add Device]** (as shown in Figure 10).
- (3) Select the appropriate add mode according to the device type (as shown in Figure 11).

Figure 9

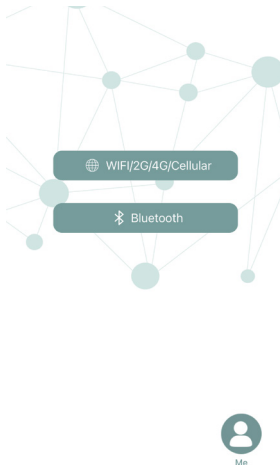


Figure 10

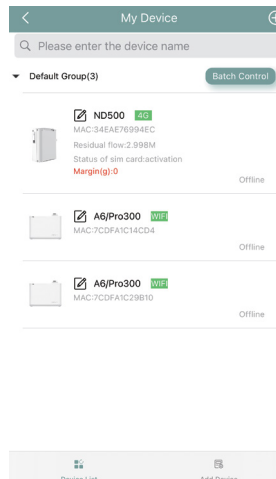


Figure 11



- (4) Add 4G/5G/cellular device (As shown in the Figure 12/13).
- (5) Add WIFI device 1 (As shown in the Figure 14/15/16).

Figure 12

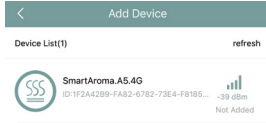


Figure 13

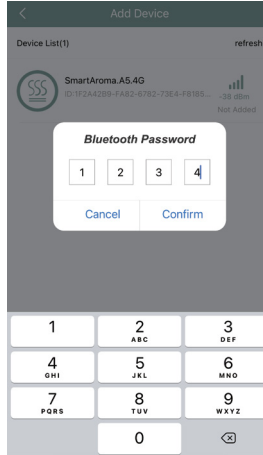


Figure 14



7 Grouping and group control

- (1) Group management (As shown in the Figure 17).
- (2) Set new group (As shown in the Figure 18).
- (3) Group control (As shown in the Figure 19).

Figure 15

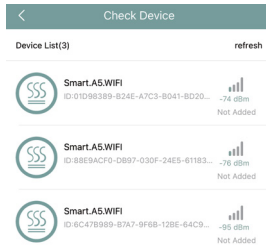


Figure 16

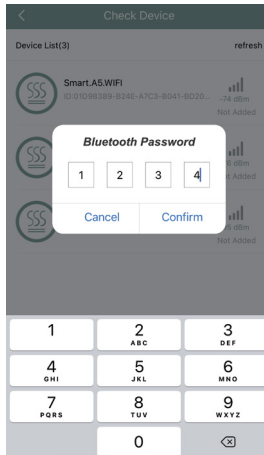


Figure 17

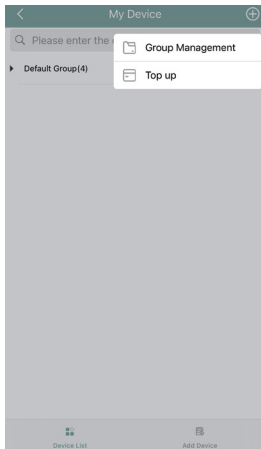


Figure 18


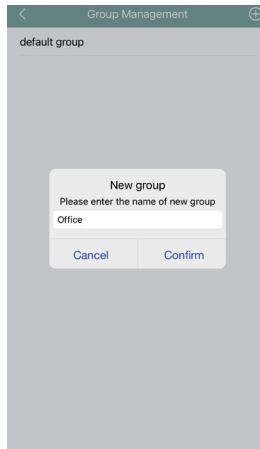


Figure 19

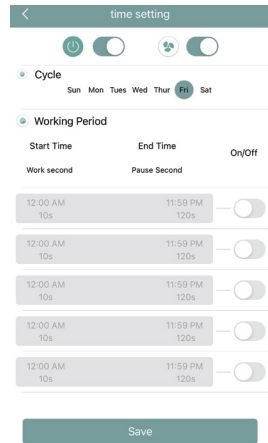

8 Other operations

- (1) Tap the pop-up menu to access the following options: Move Group, Rename, QR Code Sharing, or Remove Device (as shown in Figure 20).
- (2) Tap the pop-up menu to access the following options: Rename Group, Create New Subgroup, or Delete Group (as shown in Figure 21).

Figure 20


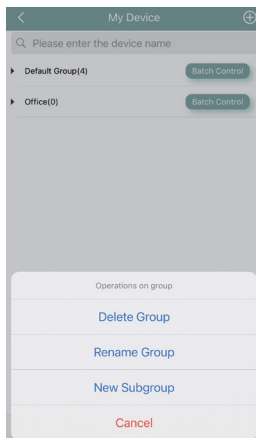


Figure 21

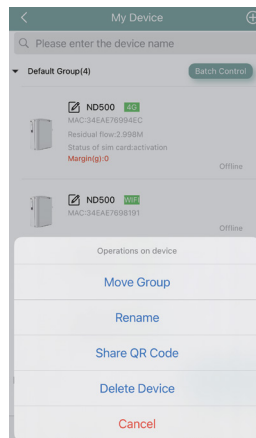

9 Fault Inspection

No scents	(1) Check whether the device's battery is powered on or not. (2) Check whether the pump is working or not and whether the nozzle is blocked or not. (3) Check whether the essential oil in the bottle is ran out or not and whether the pipe falls off or not
Oil Leakage	(1) Oil leakage inside the machine: Check whether the essential oil bottle is tightened or not. (2) Oil leakage from the mist outlet: Check whether there are obstacles in the mist outlet hole.
Unusual Noise	(1) Check pump whether fall out, and re-install the air pump. (2) Check whether the mist outlet is blocked by obstacle. (3) Check the pump whether is low airflow and low pressure.

10 Warranty and after-sales service

(1) After-sales service

- (1) Free technical support, installation guidance, and troubleshooting assistance.
- (2) Free online consultation for frequently asked questions (FAQs) and scent marketing recommendations.

(2) Equipment warranty and attentions

- (1) All devices are covered by a 12 month warranty period from the date of purchase.
- (2) To receive free warranty service, please provide a valid warranty card, invoice, or other proof of purchase showing that the product was purchased from our company.
- (3) Failures or damage caused by improper operation, misuse, negligence, or other human errors are not covered by the warranty and are not eligible for free repair or maintenance services.

11 Machine Maintenance


- (1) To ensure optimal performance, clean the equipment regularly. It is recommended to perform maintenance every 2-3 months.
 - (2) Always disconnect the power supply before cleaning. Do not operate the machine with wet hands to avoid the risk of electric shock or personal injury.
-

12 Long-Term Non-Use

- (1) Turn off the machine, disconnect the power supply, and properly store the power cord.
- (2) Clean the filter components.
- (3) Place an activated carbon deodorizing pack inside the machine or its packaging to prevent residual substances from causing unpleasant odors.
- (4) Cover the machine with a dust cover and store it in a cool, dry, and well-ventilated place away from direct sunlight.


13 Scent System Atomiser Core Replacement Guide

A spare Atomiser Core and clear tube are supplied in the box when the Scent Machine is provided to you.

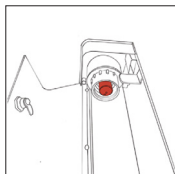


1. Locate the Atomiser Core

Turn off the scent machine. The Atomiser Core is positioned in the top section of the scent machine and is connected to the clear tube that draws fragrance from the bottle.

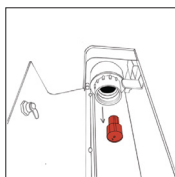

2. Remove the existing Atomiser Core

Gently pull the Atomiser Core downward to release it from the device. If it is firmly in place, use pliers carefully to assist removal. A small amount of fragrance or cleaning solution may be present, so please protect clothing, skin and surrounding surfaces from possible spills.

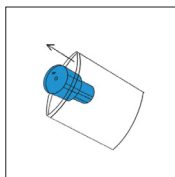


3. Install the new Atomiser Core

Insert the replacement Atomiser Core into the unit and reconnect the clear tube, ensuring it is fully and securely seated. Dispose of the old part.



4. Check the installation

Confirm the Atomiser Core is firmly in place and the tube is correctly attached before switching the scent machine back on.

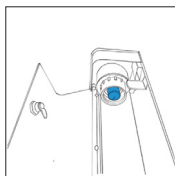

All Done!

Your scent system is now ready to use. Sit back and enjoy your chosen fragrance. If for any reason your scent system is not performing well please reach out to us at ecoscent@ecoscent.co.uk or WhatsApp +44 7361 534520

Care Tips:

Clean any spills immediately to prevent staining or slipping. Fragrance and cleaning solution can spill during replacement. Protect clothing, skin and nearby surfaces, and clean any spills immediately to avoid staining or slipping.

14 Clean Me Guide

It is important to regularly clean your scent delivery system with our EcoScent cleaning solution every couple of months to ensure the system runs smoothly and to prevent unnecessary internal damage.

Step 1		To clean the scent delivery system, ensure that fragrance oil bottle is empty then half fill with cleaning solution. Turn on the scent system to run as normal for 5-10 minutes.
Step 2		Turn off the power, pour out any residual cleaning solution and retain for future use.
Step 3		If the scent system is in constant use, the cleaning operation above should be carried out every 2-3 months to ensure ultimate efficiency of the atomised scent delivery technology.

If the equipment is not being used for a long period of time it is recommended that the fragrance oil bottle is emptied and the fragrance oil stored in a dry, dark, secure location. The scent system should then be cleaned with the cleaning solution as mentioned above. Please refer to User Manual for further information.

Failure to clean the machinery will affect the warranty

ECOSCENT

www.ecoscent.co.uk | ecoscent@ecoscent.co.uk