


ECOSCENT WIRELESS BARREL BLUETOOTH



- Built in bluetooth function
- USB power supply or optional plug
- Features advanced cold air diffusion technology
- Wireless & Rechargeable

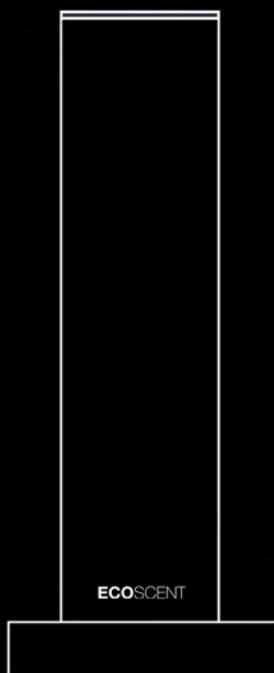

COLOUR OPTIONS




Black



Silver

SPECIFICATION SHEET

Product Code : 001-022 Black | 001-023 Silver

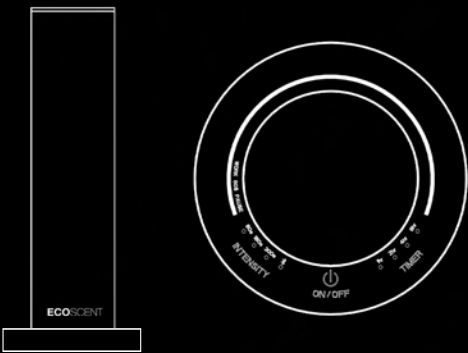


PRODUCT SPECIFICATIONS	
Product Name	EcoScent WIRELESS BARREL BLUETOOTH
Dimensions	Ø (top) 69mm x Ø (base) 113mm x H280mm
Weight	1.15kg
Coverage	300m ³
HVAC	No
Scent Chamber	110ml
Colour	Black or Silver
Lifetime	10,000 Hours @ 45°
Operating Temp	0-50°C
IP Rating	IP54
Mounting	Stand Alone
Minimum Noise	<38 DbA
Connection	Type C
Control	Touch Panel Operation / Full Programming Via Bluetooth Control Intensity Control
Power Consumption	6.0W and Lithium Battery 5200mAh
Supply Voltage	5V-2A
Supply Current	0.41A
Scent Consumption	1ml / Per hour on 100% Concentration. Lasts approx. 24 days (based on 100ml used at 40% Concentration, 10 hours a day)
Length of Product Tested	50pc
Input Voltage (V DC)	5V / 1m Power Lead
Input Power (W DC)	6W
Total Scent Output (m ³)	300m ³
Efficiency (SCENT /W)	50



ECOSCENT

Premium Scenting Solutions

PRODUCT MANUAL WIRELESS BARREL BLUETOOTH

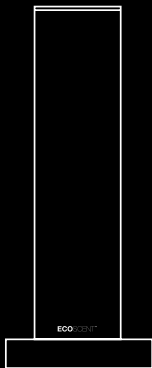

Please read the user manual carefully before using the product and keep it in a safe place.

Safety Precautions

1. Do not use overloaded power supplies, USB ports, sockets, or use damaged power cords and plugs. If used, it may endanger your safety and may cause fire.
2. Please do not open the inside of the scent delivery system as this may cause damage. If the scent delivery system works in error, please read the user manual carefully, follow the normal procedure or consult after-sales.
3. When the scent delivery system is working, do not disassemble the scent delivery system or shake the scent delivery system vigorously.
4. Do not put the scent delivery system or power adapter in water. Do not put water in the fragrance bottle.
5. When the scent delivery system is already filled with fragrance oil or cleaning solution, do not invert, tilt or rotate the scent delivery system to prevent liquid spillage and damage of the scent delivery system and surfaces.

In The Box

		
Power cable	See Quick User Guide In Box	Plug Adaptor

Product Instruction



The EcoScent Wireless BARREL features advanced diffusion technology that converts fragrance oil into a fine, dry, mist, releasing fragrance safely and directly into your environment without sprays or aerosols. Its features: the scent diffusion speed is fast, the atomised particle is fine and smooth, the oil consumption is stable and low.

The EcoScent Wireless BARREL uses a professional diaphragm pump which can work for 10,000 hours. The EcoScent Wireless BARREL has a built in touch panel to control the working time and aroma concentration based on your preference. Leading technology with patented micron atomisation makes the Wireless BARREL'S aroma diffuse and spread quickly providing a long lasting fragrance.

MODEL NO.	BARREL	DIMENSIONS	Ø 113 x 280 mm
OIL CAPACITY	110ML	N.W	1.15kg
COVERAGE AREA	300 CUBIC METERS	VOLTAGE	Type C 5V-2A
POWER	6.0W	NOISE	<38dba
OIL CONSUMPTION	1ML PER HOUR ON 100% CONC	INSTALLATION METHOD	Free Standing

Installation Instruction

Upon initial receipt, charge the unit for 10 hours to achieve full capacity. The intensity key light will flash when battery is low and stop when battery is sufficient. The battery will last 7 days when being used: Work on 60s Pause 180s, using 8 hours every day.

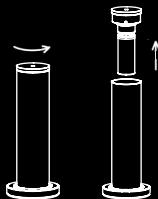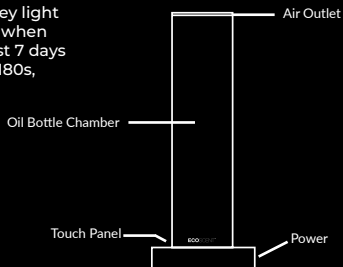


Rotate the top of the Barrel anticlockwise to separate it from the bottom of the barrel. The oil bottle shall be revealed.



Rotate the oil bottle anticlockwise to separate it from the top of the Barrel and pour a maximum of 110ml of oil into the bottle.



Re-attach the oil bottle by turning it counter-clockwise and screwing it into the top of the Barrel.

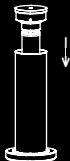


Reconnect the top of the Barrel to the bottom by tightening it clockwise.



Connect the power cord to adapter and insert TYPE C cable to your Barrel to charge. Barrel is ready to use.

Settings

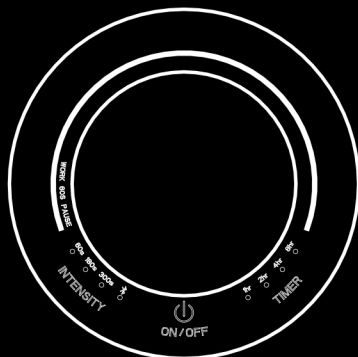

Power ON

Connect the Type C cable at the base of the scent machine. Insert the other end of the USB into the power adapter to charge. Connect to the power supply. The unit can be used while charging. Please ensure the unit is placed with at least a 30cm distance between the unit and any surface above it.

Working Time Setting (Touch Panel)

- Press ON/OFF to turn unit on and off.
- Select number of hours to operate from 1, 2, 4, or 8 hours.
- The Scent System will auto turn off after the selected duration ends.

Intensity Setting

(Touch Panel)

Select the preferred Intensity, the Scent System will work for 60 seconds then pause per your selection, from 60, 180, or 300 seconds.

Interval Setting

Work for 60 Seconds/Pause for 60 Seconds - HIGH

Work for 60 Seconds/Pause for 180 Seconds - MEDIUM

Work for 60 Seconds/Pause for 300 Seconds - LOW

The strongest setting is Work for 60 Seconds/Pause for 60 Seconds. You can specify other intensity settings by using the Bluetooth App and the highest setting on the App would be Work 300/Pause 5 and you can also run the unit for as many hours as you want and set the durations/days of the week via the Aroma World App. See Page 7 for App Control.

Troubleshooting

FAULT	SOLUTION
SCENT DELIVERY SYSTEM IS NOT WORKING	- Check if the battery is out of power by plugging it in. - Check if the power is on. - Check Scent Delivery System working time if using the App.
WEAK OR NO ATOMISATION	- Check if the nozzle is blocked. - Check if the oil pump is attached correctly. - Use the cleaning solution.
OIL LEAK	- Check if the Scent System is upright. - Check if the bottle washer is broken. - Check the connection of the oil bottle and the atomiser is closed tightly.
ABNORMAL NOISE / FURTHER HELP	Please send video of the fault to ecoscent@ecoscent.co.uk


Scent Delivery System Maintenance

For the Scent Delivery System maintenance advice please refer to the Clean Me Guide at the end of this User Guide. Please ensure the fragrance oil is topped up regularly. Clean with cleaning solution every 2 months or if changing the fragrance.

Do not use the water in the Scent System. Do not tilt the Scent System.

Before using the Scent System please ensure it is correctly installed and to be checked at least monthly for any leaks or faults. Damage may be caused by improper installation or if using non approved EcoScent fragrances. Please take care when handling fragrance oils and the Scent System as any spillages may cause damage to fabric, flooring, surfaces, polished and painted areas. Any spillages of fragrance oils from the fragrance bottle or from the Scent System should be cleaned up immediately.


Setting Up Bluetooth Function

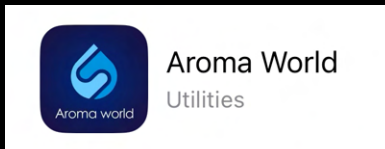

Search for Aroma World App on App Store / Google Play.

1. Sign Up using your phone number or email address. Then proceed to log in into your account.


2. Interface.

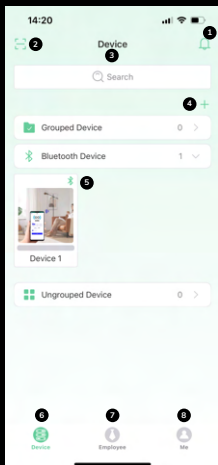

- ① All operation messages.
- ② Scan QR code on the machine to view the machine directly.
- ③ Enter device serial number to find the machine.
- ④ Add another device.
- ⑤ Entering machines settings.
- ⑥ Device management interface.
- ⑦ Staff management interface.
- ⑧ Personal account interface.


3. Adding the device and switching from Bluetooth and Touch Panel Control.

- a. Press INTENSITY button on the device until the Bluetooth blue light indicator turns on.
- b. Please turn on the phone location/GPS and Bluetooth first, open the “+” sign in the upper right corner of the APP device management interface, select and click “Add Bluetooth device”.
- c. Enter the Bluetooth search interface, click on the available device searched and a verification authorisation code “666666”, click to confirm.
- d. Input the device name.

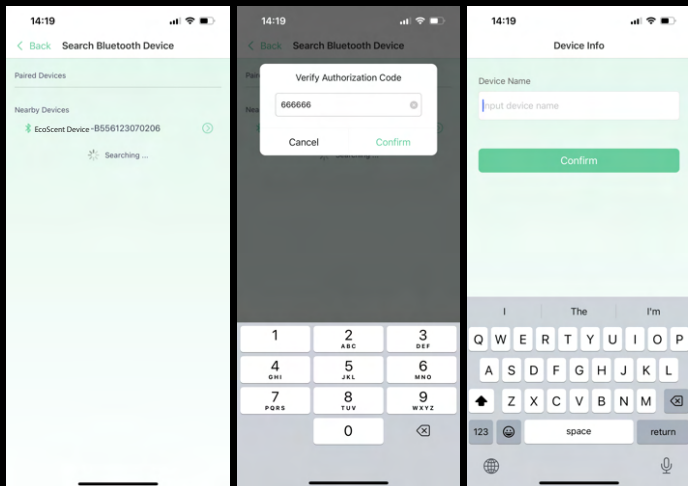


4. Device Interface.

- ① Device menu: serial number, device type, delete.
- ② Current device information: device name, latest boot time, network status, and concentration.
- ③ Device name.
- ④ Fragrance oil name.
- ⑤ Current Operation Mode
- ⑤.1 When you click the + you add an operation mode and enter the work mode interface. Here you can set work days, and concentration. Press Confirm to save changes and then click the on/off button to send new settings to the device.
- ⑥ Device on/off button as well as Operations Mode settings change confirmation button.

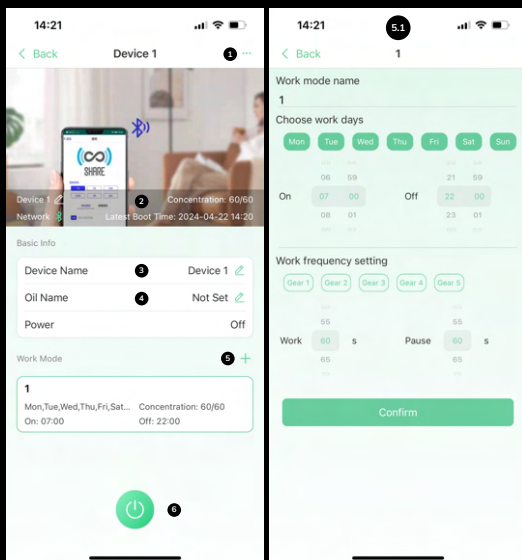


Scent System Atomiser Core Replacement Guide

A spare Atomiser Core and clear tube are supplied in the box when the Scent Machine is provided to you.

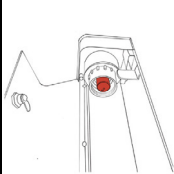


1. Locate the Atomiser Core

Turn off the scent machine. The Atomiser Core is positioned in the top section of the scent machine and is connected to the clear tube that draws fragrance from the bottle.

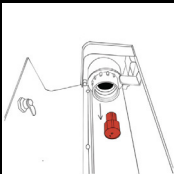

2. Remove the existing Atomiser Core

Gently pull the Atomiser Core downward to release it from the device. If it is firmly in place, use pliers carefully to assist removal. A small amount of fragrance or cleaning solution may be present, so please protect clothing, skin and surrounding surfaces from possible spills.

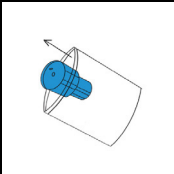


3. Install the new Atomiser Core

Insert the replacement Atomiser Core into the unit and reconnect the clear tube, ensuring it is fully and securely seated. Dispose of the old part.



4. Check the installation

Confirm the Atomiser Core is firmly in place and the tube is correctly attached before switching the scent machine back on.

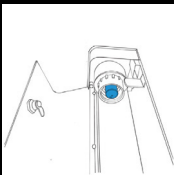

All Done!

Your scent system is now ready to use. Sit back and enjoy your chosen fragrance. If for any reason your scent system is not performing well please reach out to us at ecoscent@ecoscent.co.uk or WhatsApp +44 7361 534520

Care Tips:

Clean any spills immediately to prevent staining or slipping. Fragrance and cleaning solution can spill during replacement. Protect clothing, skin and nearby surfaces, and clean any spills immediately to avoid staining or slipping.

CLEAN ME GUIDE

It is important to clean your scent delivery system every couple of months to ensure the system runs smoothly and to prevent unnecessary internal damage. Also, use the cleaning solution before replenishing the fragrance.

STEP ONE



To clean the scent delivery system, ensure that fragrance oil bottle is empty then half fill with cleaning solution. Turn on the scent system to run as normal for 10 minutes.

STEP TWO



Turn off the power, pour out any residual cleaning solution and retain for future use.

STEP THREE



If the scent system is in constant use, the cleaning operation above should be carried out every 2-3 months to ensure ultimate efficiency of the atomised scent delivery technology.
Clean the outside of the scent machine with a damp cloth.

If your EcoScent Machine will not be in use for an extended period, follow these additional steps:

- Empty the fragrance oil bottle.
- Store the fragrance oil in a dry, dark, and secure location.
- Clean the scent system using the cleaning solution as instructed above.
- Wipe your machine.

* Failure to clean the scent system will affect the warranty *